

## Quick start guide to the Platform Basket 1380/1365 Spider Lift.

1. Ensure trailer is secured to a vehicle, lower ramps and disconnect front chains.
2. Turn Key to 12 clock position (this enables ground controls) and wait about 10 seconds
3. Ensure all emergency stops are Reset / Released. (turn clock wise to reset)
4. Start engine with start button on control box near key (use choke button as well if engine is cold)
5. On drivers side of trailer, find the ground controls and use green button and up arrow to raise boom as high as it will go. about 1 metre off the ground.
6. Using remote, drive machine backwards a foot or so and then disconnect rear chains.
7. Drive machine off trailer.
8. Back at the ground controls use green button and down arrow to lower the boom to original position unless keeping it raised will assist in driving to the work area.
9. Turn the key to 2 o'clock enabling basket and leg controls.
10. To lower the legs, move the blue lever to the middle position.
11. **On steep ground - Lower the legs** to about 300mm off the ground if the ground to be driven on is uneven or if there is a risk the the machine could tip over **especially going across a slope with tracks in narrow position.**
12. Drive to the work area, and move the blue lever to the middle position again.
13. Put all stabilizer legs on the ground or on pads if required.
14. **Using two legs at a time**, Lift the machine to level, either front, back, left or right. **Two** at a time is the easiest way.

**Before starting work** - Complete checks of front of Log book and fill in as required,  
 Complete a Risk assessment, SWMS or JSA as required.  
 Ensure harness's are worn at all times.  
 Advise Spider lift hire of any issues related to the lift you are working with.  
DO NOT USE if there are any known issue with the machine.  
 Check the fuel level every 3 hrs if using the Honda engine.

### Trouble shooting

Machine will not start,	Check emergency stops Out of fuel 240v power disconnected
Boom will not operate	Key still set to ground controls, turn to 2 o'clock Engine not running. Lift not level, You may have run out of travel in the legs. use pads under the feet on the low side or start again with care not to lift the machine higher than you need to.
Boom will not come down	Telescope in towards the machine. then come down
Legs will not come up	Basket not in home position, adjust slew, lower boom, jib or telescope in. Blue lever not in centre position.
Will not drive straight	Blue lever still set to operate legs not in fast or slow.